


# BUNDUAWN

## Mounting hardware/Requirements:

- 1 x measuring tape
- 4 x M6 x 50mm bolts (included)
- 4 x M6 Nylock nuts (included)
- 2 x M6 x 32mm washers (included)
- 2 x M6 x 22mm washers (included)
- 1 x 6mm Drill bit
- 6 x M8 x 40mm bolts (included)
- 6 x M8 Nylock nuts (included)
- 12 x M8 washers (included)
- 1 x 8mm Drill bit
- 2 x 10mm spanners or ratchet

## Procedure:

- Place brackets on roof rack. Mark, drill and mount.
- Measure distance between brackets.

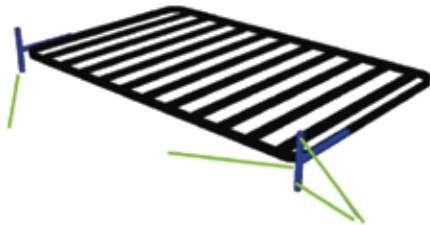

- Open awning, mark same distance as measured on brackets.
- Remove brackets from roof rack, mount brackets to awning backboard
- Close awning.
- Mount brackets to roof rack



BUNDUAWN